

RECOMMENDED CABLE DRESSING

CONNECTING LEADS

Connect the suppressor as shown in the installation diagram. Refer to page 5 for recommended cable dressing. Connect the terminals within the suppressor to the load side of 60A breakers within the panel.

RECOMMENDED WIRE GAUGE

Minimum of 8 AWG

Maximum of 4 AWG (for ease of dressing)


LENGTH OF CONNECTING LEADS

The longer the connecting leads between the the *ZoneMaster* and power panel, the higher the residual transient voltage.


RECOMMENDED MAXIMUM: 19" (500mm)

IDEALLY: 10" (250mm)

Each 10" (250mm) increase in cable length; increases clamping voltage by 25V per 1000A surge current discharged.

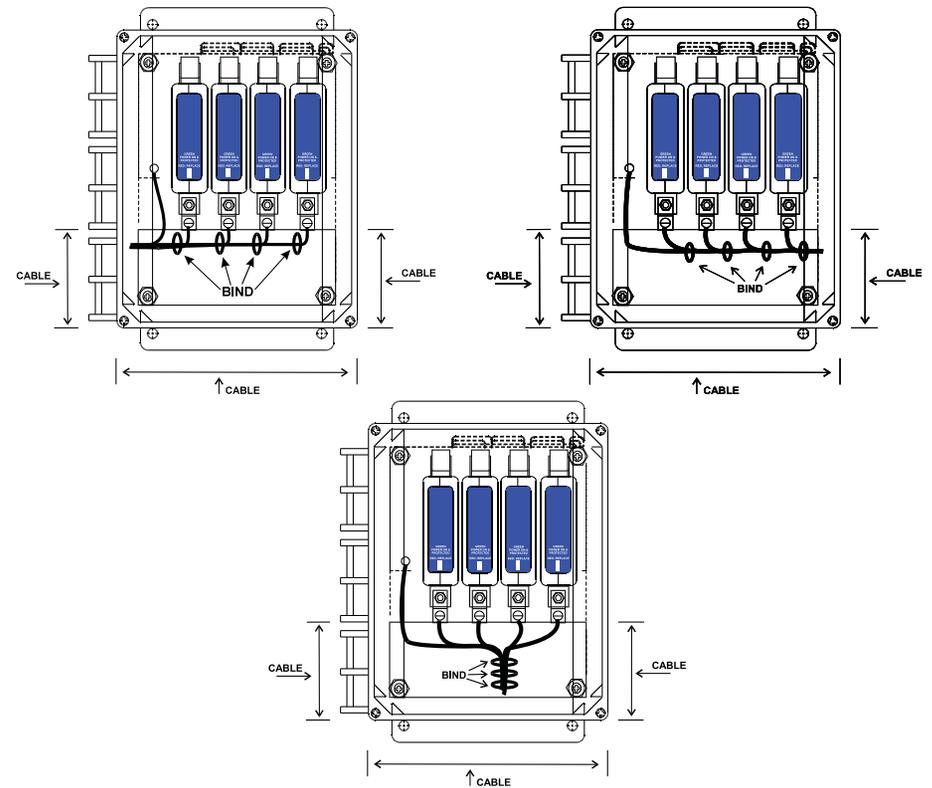

DIMENSIONS

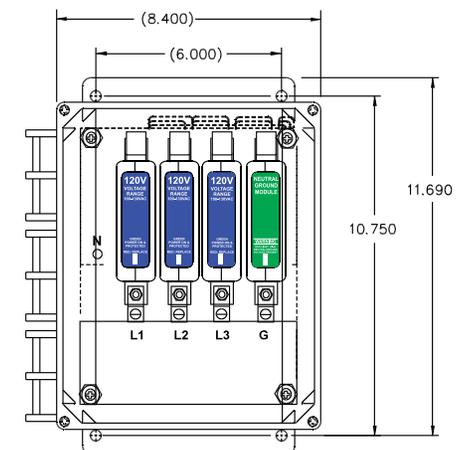

- **BIND THE PHASE NEUTRAL AND GROUND CONDUCTORS TIGHTLY, OVER THE ENTIRE RUN FROM THE SUPPRESSOR TO THE SERVICE PANEL.**
- **ALWAYS USE THE SHORTEST LENGTH OF CONNECTING CABLE POSSIBLE.**

ZONEMASTER Configuration and Schematic Connection Diagrams

INTRODUCTION

This document explains how to install the *ZoneMaster* Series of AC Panel Surge Protective Devices.

INSTALLATION INSTRUCTIONS

Warning: Terminals marked L1, L2, L3, N, GND (where relevant) must be connected respectively to phase(s) neutral and ground. Failure to comply may result in danger or damage. See corresponding diagrams for proper connections.

INSTALLATION DESCRIPTION

ZoneMaster units are connected in parallel (or in “shunt” across) the supply to be protected. The connecting cable does not carry the supply current, only the current associated with suppressing the transient overvoltage.



MOUNTING

The units should be mounted **as close as possible** to the panel to be protected. See (page 4) on Connecting Lead lengths. Conduit, preferably metallic, is to be installed from the suppressor to the panel. Drill holes in the *ZoneMaster* enclosure only in the designated areas as shown in recommended cable dressing illustrations (page 5). Mount the unit in the appropriate location using the mounting holes provided on the enclosure.

INCORRECT INSTALLATION WILL IMPAIR THE EFFECTIVENESS OF THE AC PANEL PROTECTORS.



Particularly important is the length of the connecting leads (see page 4).

120/240V SPLIT PHASE 3W

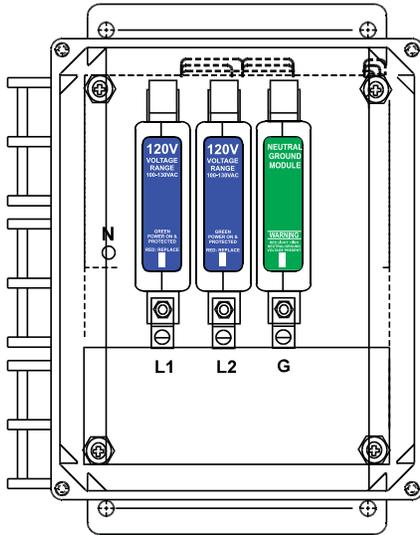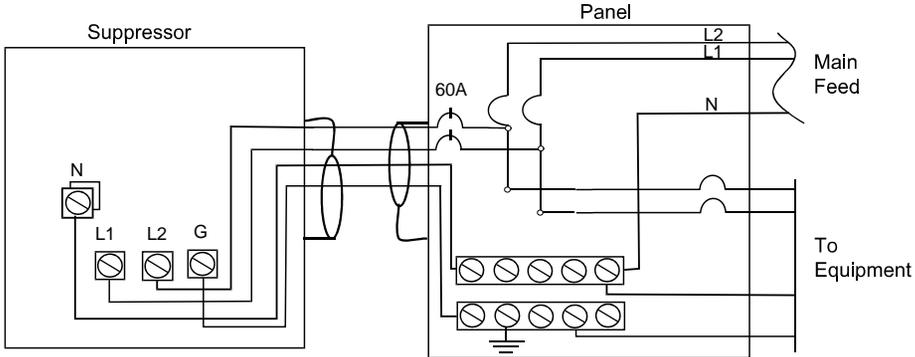

ZONEMASTER Configuration and Schematic Connection Diagrams

277/480 THREE PHASE 4W WYE
 220/380 THREE PHASE 4W WYE
 240/415 THREE PHASE 4W WYE

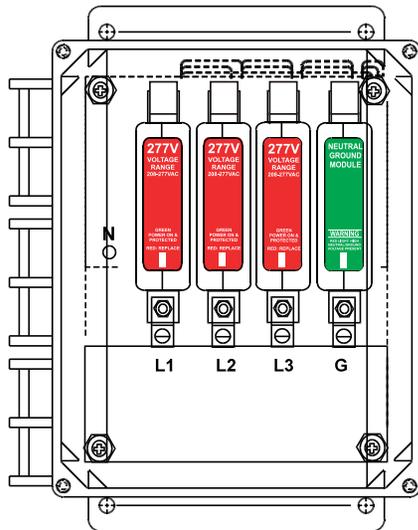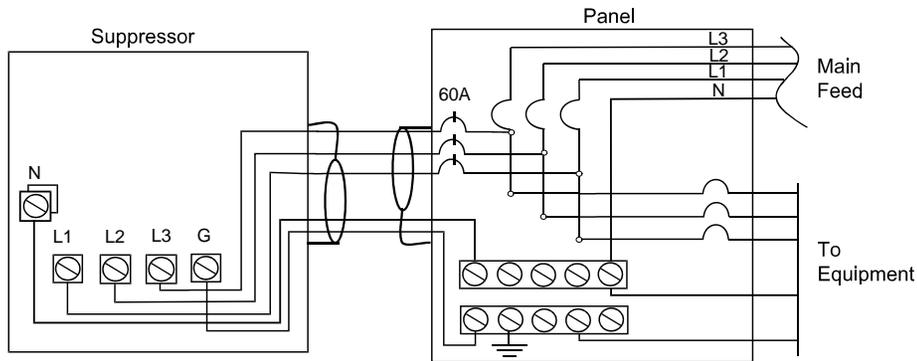

STATUS INDICATORS

The *ZoneMaster* units have comprehensive, continuous visual status monitoring present on each module.



Power/Protection Indicator

Status Indicated	Full Protection Present	Reduced (Standby) Protection	No Protection	No Power to Protector	High N-G Voltage*
LED Indicator	Green LED Lit	Red LED Lit	Red LED Lit	Green LED Out	Red & Green LED Lit

REMOTE INDICATORS

A remote indication of the reduced protection state is available as a normally open or normally closed dry contact.

***WARNING: OF HIGH NEUTRAL TO GROUND VOLTAGE**
 On certain models, if both Red and Green lights are on, consult a qualified electrical contractor to check the integrity of the building wiring.

MAINTENANCE

At intervals not exceeding two months, check:

1. Status indication lights
2. Conditions of connecting cables and terminals

Module Replacement

WARNING: Before opening the access panel, ensure that the AC supply has been disconnected.

Unplug the remote contact connector at the top of the module. Remove the mounting nuts at the top and bottom of the module. The protection module can now be removed.

WARNING: Replace the defective module with a module having the **same color label and voltage rating.**

Installation of the replacement module is the reverse of the above procedure. Final step, check that all cable connections are secure and nuts are tightened. Do not overtighten.

NOTE: No customer serviceable parts inside. Opening module **WILL** void Warranty

Copyright 1996© By Atlantic Scientific Corporation
All Rights Reserved

Printed in U.S.A.

*For more information please contact your local MTL office
or visit our web site at www.mtlsurge.com*

The Americas: +1 800 835 7075
UK: +44 (0)1582 723633
Singapore: +65 6 487 7887

The Netherlands: +31 (0)481 450250
Italy: +39 (0)2 6180 2011
Australia: +61 (0)8 9455 2994
India: +91 (0)44 450 1660



Installation Instructions & User Manual

ZONEMASTER SERIES

AC Panel Transient Voltage Surge Suppressors